 
 
 




## VK30 BODY-WORN CAMERA



# WHAT'S IN THE BOX

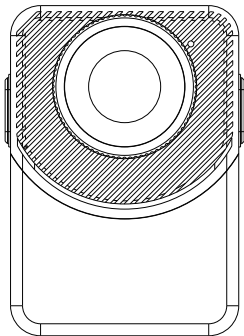

 
Quick start guide



# TABLE OF CONTENTS

Specification .....	03
HOW TO CHARGE YOUR VK30 .....	04
Connect to the Wi-Fi to enable the APP control .....	05
Operation .....	06
Attaching the Belt Clip .....	07
How to playback .....	08
Troubleshooting .....	09~10

# SPECIFICATION

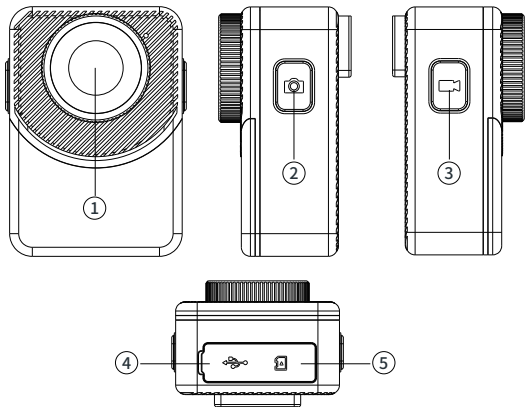

① Camera

② Take picture  
Long press 3s turn on WIFI



③ long press 3s power on/power off  
take video

④ Type-C charging

⑤ micro Card


# HOW TO CHARGE YOUR VK30

  Upon receiving your VK30, it is recommended that you fully charge the device before usage. Please charge the unit for 2 hours before using it or the first time to ensure that there is sufficient power.

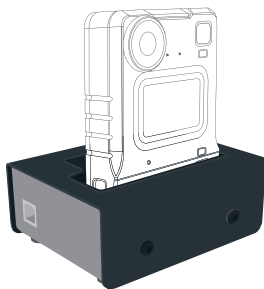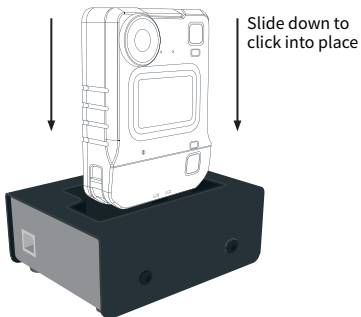

# CONNECT TO THE WI-FI TO ENABLE THE APP CONTROL :

 - ( a ) Press and hold the camera button for 3 seconds to turn on Wi-Fi.
- ( b ) Select (v30-8cb2ac)
- ( c ) Enter the password(88888888) and Connect.

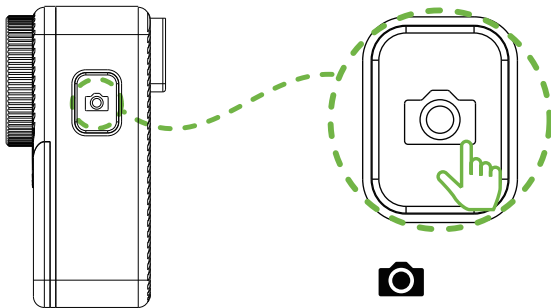

Press and hold for 3 seconds  
to turn on Wi-Fi

# OPERATION

## TO START / STOP RECORDING (CONFIGURABLE)

Note: Please insert the SD card before use.

 
 
 
 
Users can activate recording by pressing on Camera button on the side as shown. Recording is stopped by pressing and holding the front button.

How to take photos

Press the camera button to start taking pictures, and press the button again to save the picture.


How to record

Press the record button to start recording, press the button again to save the video.

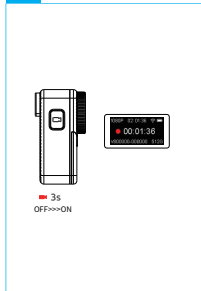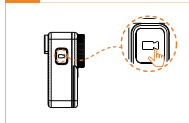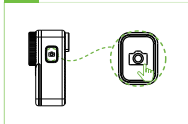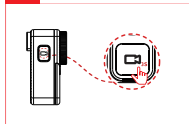

## ATTACHING THE BELT CLIP


 
Follow the steps shown in the figure below to install the belt clip. The belt clip is removable and can be removed by pressing a button.

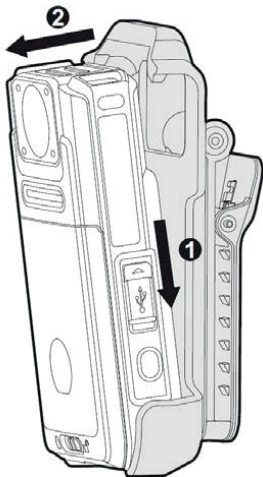



# HOW TO PLAYBACK

  - (1) Connect the Recorder to the computer with USB cable.
- (2) The device will be detected
- (3) Click the device in the image below:  
The photo recording files will be saved at "PHOTO" folder.  
the video recording files will be saved at "VIDEO" folder:  
The file is named after the recording time.

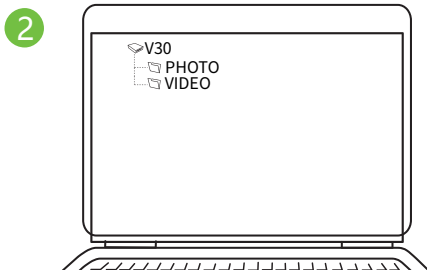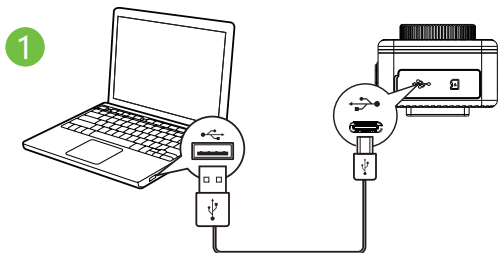

# TROUBLESHOOTING

Phenomena	Analysis	Solution
The product cannot be turned on	The battery may be improperly attached.	Remove the battery and attach it again.
	The battery may run out.	Recharge or replace the battery.
	The battery and the charging probes are in poor contact due to dirtied or damaged battery contacts.	Clean the battery contacts.
The volume is low when playing back	The microphone and the speaker are blocked or damaged.	Clean the microphone and the speaker.
audios or videos The product cannot record video or audio.	The TF card is full	Switch to disk mode, and delete all data from the TF card after exporting them.
The product cannot take photo.		

Phenomena	Analysis	Solution
The product cannot pre-record or extend-record the video.	The pre- or extend-recording feature is not enabled.	Enable the feature.
The product does not turn on the IR LED automatically when recording video in dark environment.	The IR LED feature is not enabled.	Enable the IR LED feature.
The product gives no alert tone; the indicator does not light up. in dark environment.	The Silent Mode is enabled.	Disable the Silent Mode.
The product gives no response to operations.	The product has crashed.	Press the Power On/Off key for 10 seconds to forcibly turn the product



For more information, please visit: [www.viklink.com](http://www.viklink.com)